

INSTALLERA DRIVRUTINEN FÖR SKRIVAREN

1. Anslut LM-390A/PC (MK9-USB) till datorn med USB kabel.
Starta skrivaren. Välj utskrifts material.
2. Tryck på OPTION . [**PC connection/OPTION setting screen**] visas.
3. Tryck på ▲/▼ tangenterna för att välja "**DIRECT PRINTING FROM PC**".
4. Tryck ENTER.
5. Tryck på ◀/▶ tangenterna för att välja "**YES**".
Tryck ENTER.
6. Ett meddelande i displayen visar att maskinen är redo att ta emot data från PC.
7. Sätt in den medföljande WinSign CD i datorn.
8. Börja installera genom att klicka på "Installera MK9-USB drivrutin".
9. Fortsätt med installationsprocessen, enligt meddelande på datorn.

```

DATA FILE TRANSFER
      FROM PC
DIRECT PRINTING
      FROM PC
OPTION

```

```

DATA FILE TRANSFER
      FROM PC
DIRECT PRINTING
      FROM PC
OPTION

```

```

DELETE
INPUTTING FILE

  YES      NO

```

INSTALLING THE PRINTER DRIVER

1. Connect the LM-390A/PC (MK9-USB) to the computer with USB cable, then turn it on. Select printed material.
2. Press OPTION .
The [**PC connection / OPTION setting screen**] appears.
3. Press ▲/▼ key to select "**DIRECT PRINTING FROM PC**".
4. Press ENTER.
5. Press ◀/▶ key to select "YES".
Press ENTER.
6. A message is displayed, which shows the machine is ready to receive data from PC.
7. Insert the included WinSign CD into the computer.
8. Start installing the printer driver, by clicking the "Install the MK9-USB driver".
9. Proceed with the installation process, according to the message displayed on the computer.

```

DATA FILE TRANSFER
                FROM PC
DIRECT PRINTING
                FROM PC
OPTION
  
```

```

DATA FILE TRANSFER
                FROM PC
DIRECT PRINTING
                FROM PC
OPTION
  
```

```

DELETE
INPUTTING FILE

  YES      NO
  
```